


FLOOR
F1 - CLEAN.
WALL
W1 - CLEAN. APPLY UNDERCOAT AND TWO COATS WHITE EMULSION PAINT.
W2 - CLEAN. RETAIN EXISTING WALL TILING. APPLY UNDERCOAT AND TWO COATS WHITE EMULSION PAINT TO PLASTERED WALLS.
CEILING
C1 - CLEAN. APPLY UNDERCOAT AND TWO COATS WHITE EMULSION PAINT.
JOINERY
J1 - PREPARE NEW AND EXISTING JOINERY ITEMS INCLUDING DOOR AND FRAME. APPLY UNDERCOAT AND TWO COATS WHITE GLOSS PAINT.

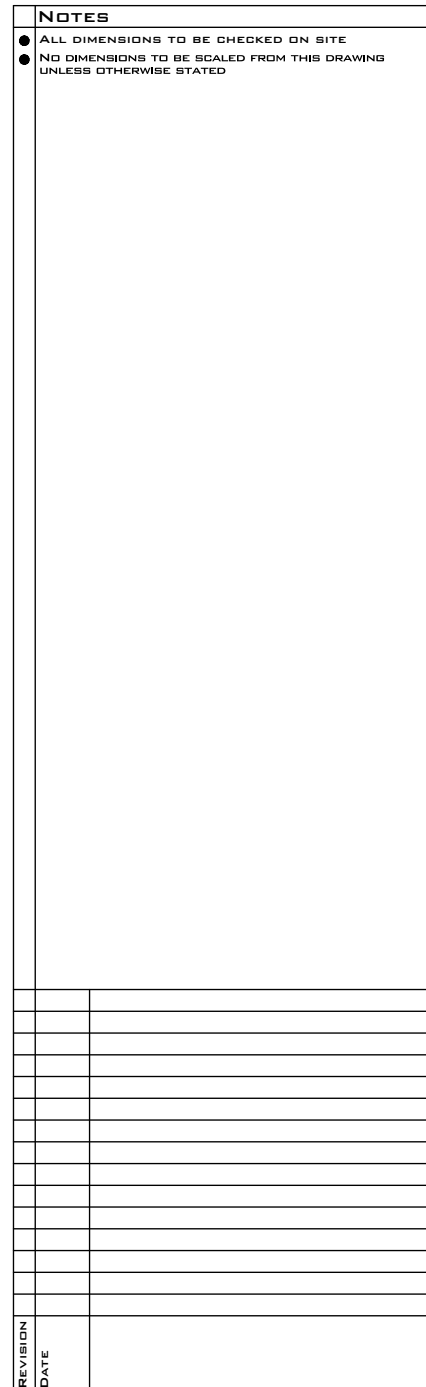

FAST
ARCHITECTURE

CLIENT			
ROCHDALE BOROUGH COUNCIL ECONOMY AND PLACE			
PROJECT			
15 BANKFIELD LANE NEW CHILDRENS' HOME			
DRAWING TITLE			
FIRST FLOOR PLAN FINISHES			
SCALE		DATE	
1:50 @A3		10.24	
JOB NO.		DRAWING NO.	REV.
2024-23		12	