

NOTE: Internal scaffolding must be continuous from ground to roof.

- Staging notes temporary works:
1. Setup scaffolding around outside perimeter of building.
 2. Remove roof tiles, completely.
 3. Outside scaffolding to remain in place.
 4. Setup scaffolding within the building as indicated on the layout.
 5. All Roof Purlins and Floor Beams must be propped at the ends.
 6. Masonry (where required for rectification) can be removed by hand starting at the top and working downwards.
 7. Masonry to be retained for the rebuild to ensure the appearance of the building is maintained.
 8. Walls can be rebuilt allowing for new / existing window and door openings. All masonry to be fully bonded with existing.
 9. Strapping to be installed between the Roof Purlins and Masonry Walls.

Note: Extents of masonry to be rebuilt are shown indicatively and actual extents to be confirmed on site.


KEY:

Location of scaffolding

Indicative area of rebuild

Refer to ESD Drawing 5410-000 for Notes

Note, for all external masonry wall repairs, refer to ESD drawing 5410-006 & 007.

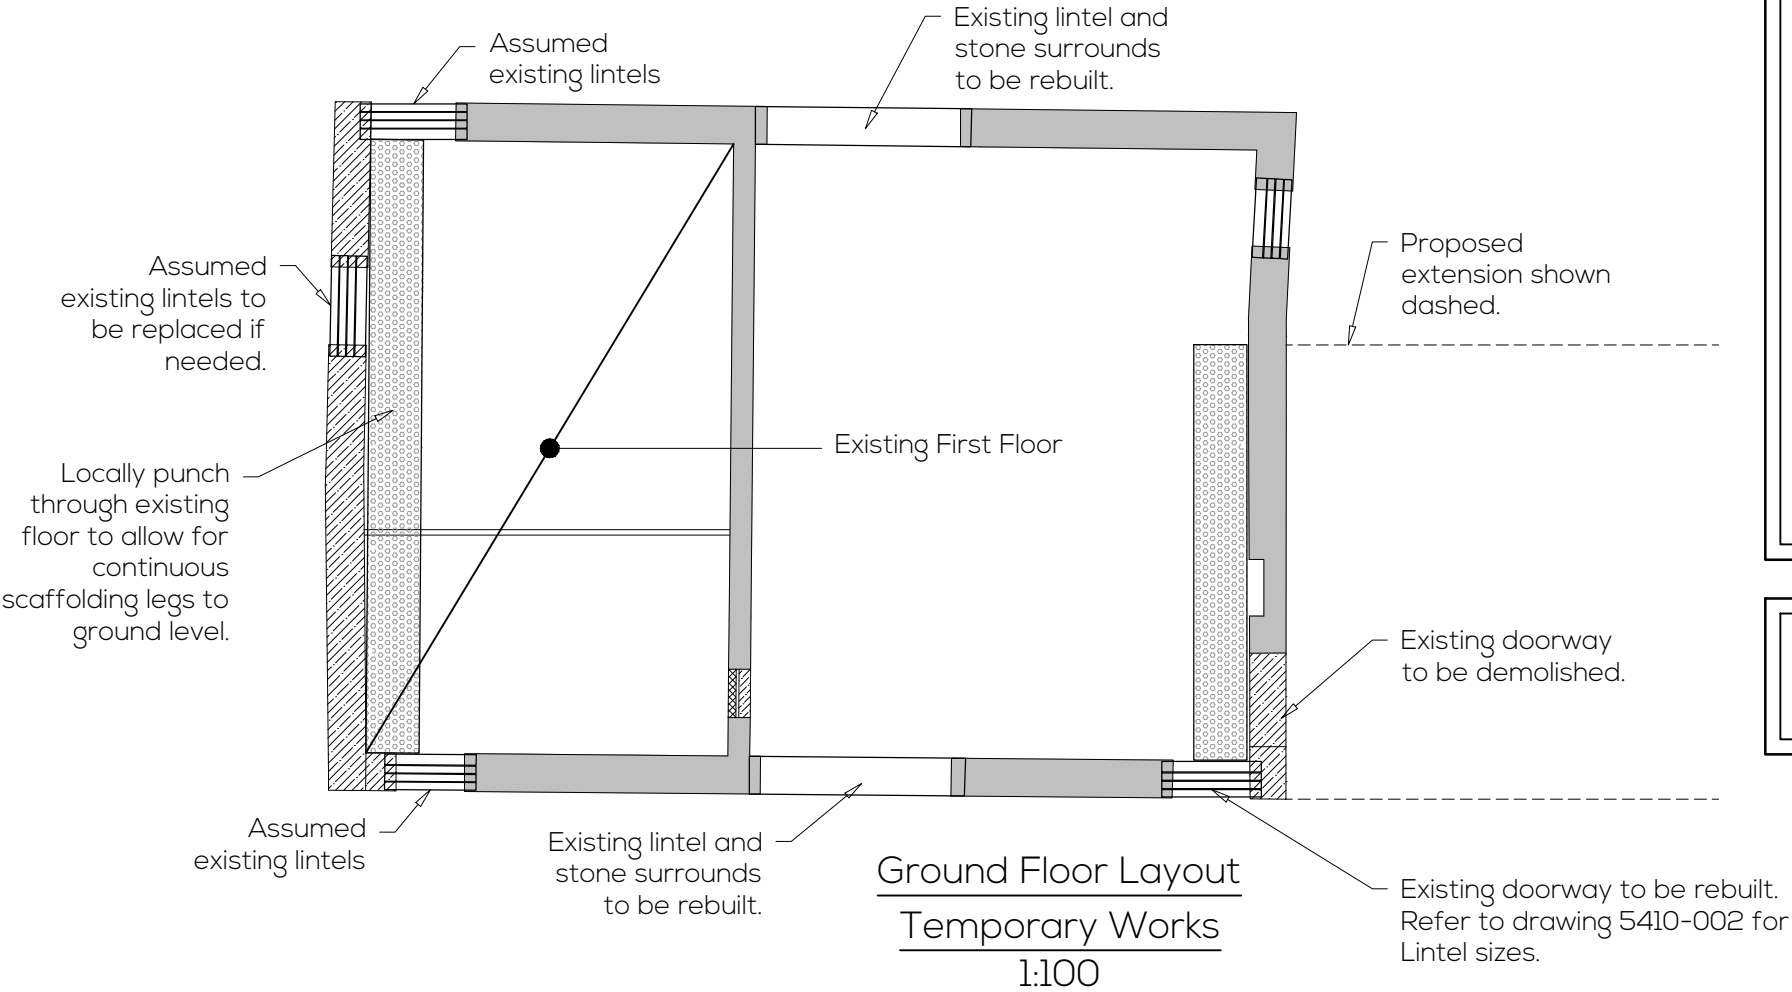

P1	PRELIMINARY ISSUE	BR	AS	14/10/25
REV	DESCRIPTION	BY	CHK	DATE

EDGE

CIVIL & STRUCTURAL CONSULTANCY

Edge Structural Design Limited
info@edgestructuraldesign.com | 0161 620 9988 | edgestructuraldesign.com

Client Grandstream Properties Ltd

Project Silver Hill Farm
Rochdale

Drawing Title Barn Ground Floor Layout
with Temporary Works

Project No. 5410

Drawing No. 020

Revision P1

PRELIMINARY

