


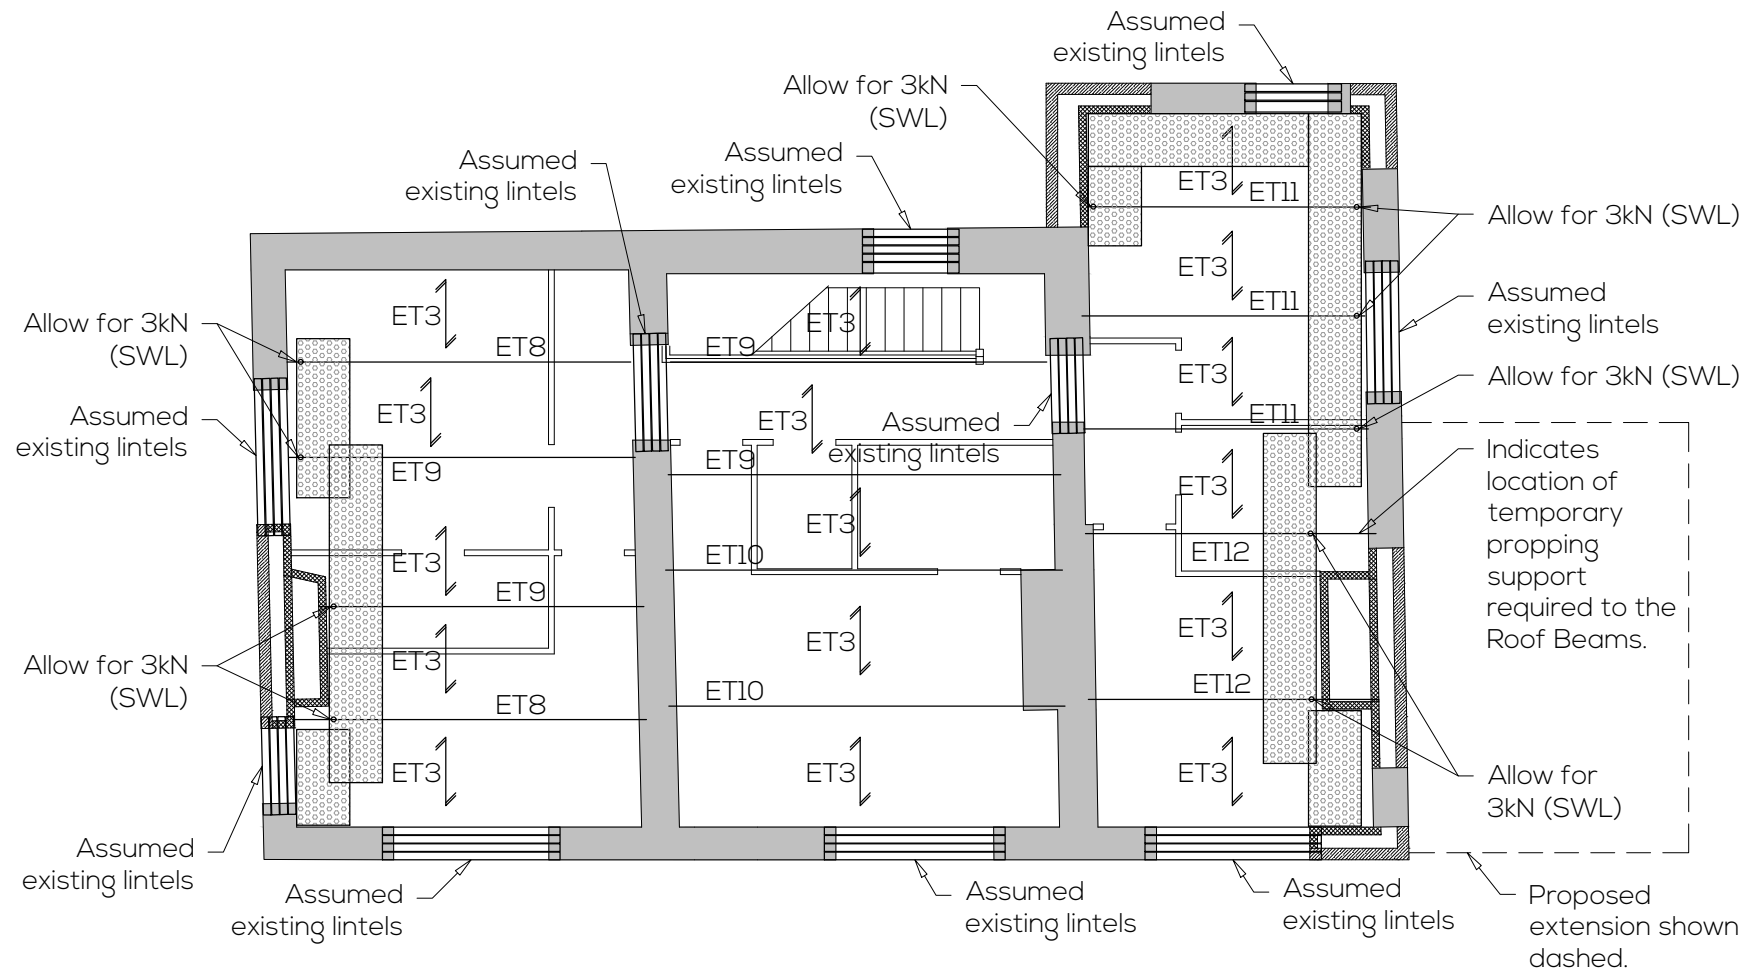

First Floor Layout
Temporary Works
1:100

Loading Note: SWL assumes sequencing for works is followed as stated on this drawing. If an alternate sequence is taken, the loading may increase.

Timber Key

- ET3 = Existing timber joists
- ET8 = Existing timber beam
- ET9 = Existing timber beam
- ET10 = Existing timber beam
- ET11 = Existing timber beam
- ET12 = Existing timber beam

KEY:

- Existing Masonry
- New/Rebuilt Stonework
- New/Rebuilt Blockwork
- Assumed Span of Existing Joists
- Location of scaffolding

Note: Extents of masonry to be rebuilt are shown indicatively and actual extents to be confirmed on site.

Staging notes temporary works:

1. Setup scaffolding around outside perimeter of building.
2. Remove roof tiles, completely.
3. Outside scaffolding to remain in place.
4. Setup scaffolding within the building as indicated on the layout.
5. All Roof Purlins and Floor Beams must be propped at the ends.
6. Masonry (where required for rectification) can be removed by hand starting at the top and working downwards.
7. Masonry to be retained for the rebuild to ensure the appearance of the building is maintained.
8. Walls can be rebuilt allowing for new / existing window and door openings. All masonry to be fully bonded with existing.
9. Strapping to be installed between the Roof Purlins and Masonry Walls.

Refer to ESD Drawing
5410-000 for Notes

Note, for all external masonry wall repairs, refer to ESD drawing
5460-006 & 007

P1	PRELIMINARY ISSUE	BR	AS	14/10/25
REV	DESCRIPTION	BY	CHK	DATE

EDGE
CIVIL & STRUCTURAL CONSULTANCY

Edge Structural Design Limited
info@edgestructuraldesign.com | 0161 620 9988 | edgestructuraldesign.com

Client: Grandstream Properties Ltd

Project: Silver Hill Farm
Rochdale

Drawing Title: Farmhouse First Floor Layout
with Temporary Works

Project No. 5410

Drawing No. 024

Revision P1

PRELIMINARY