


Assembly Instructions

Cycle Shelter 2m



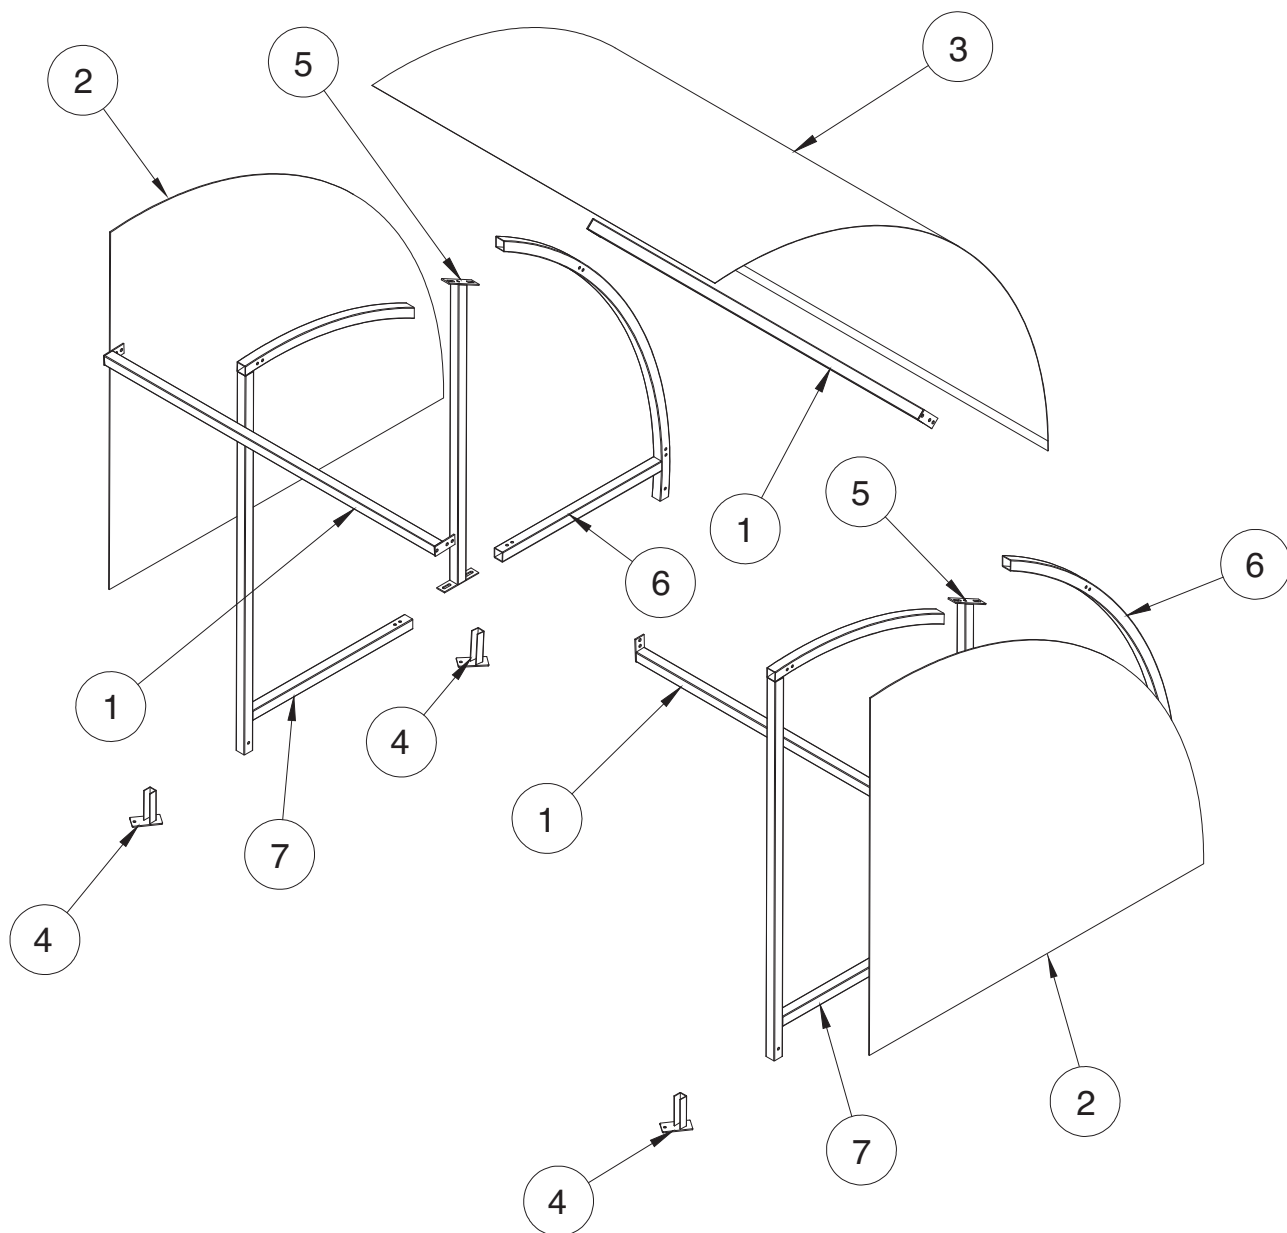


Health & Safety Information



Tools Required				
	Drill / Screwdriver		Hacksaw	 17mm Spanner
	Mallet		Hand Clamps	

Parts List


Item No	Part Code	Description	Dimensions (mm)	Dimensions (inches)	Image	Qty
		Instructions				1
1	CTB	Central Tie Bar	1950	76.8		3
2	SP	Side Panel (Optional)	1815 x 1965	71.5 x 77.4		2
3	RP1	Outside Roof Panel	3050 x 2010	120.1 x 79.1		1
4	KIF	Internal Foot	155	6.1		4
5	KST	Straight Tie Assembly	1535	60.4		2
6	KRF	Rear Frame Assembly	2115 x 985	83.3 x 38.8		2
7	KFF	Front Frame Assembly	1975 x 990	77.7 x 39		2
8	EC50	Plastic End Cap	50 x 50	2 x 2		2

Fittings								
9	MB1	M10 x 70 Bolt	10 x 70	0.4 x 2.8		4		
10	MB2	M10 x 20 Bolt	10 x 20	0.4 x 0.8		28		
11	N1	M10 Nut				4		
12	W1	M10 Washer				36		
13	W2	M12 Washer				4		
14	T25	Tek Screw	25	1		110	158	with optional side panels
15	BC	Black Caps				40		
16	BTANC M10100	M10 x 100 Concrete Bolt	10x 100	0.4 x 3.9		4		

Ground Anchor & Overall Size

Suggested size for concrete base: 200mm / 7.87in oversized (on all four sides)

■ mm
■ inches

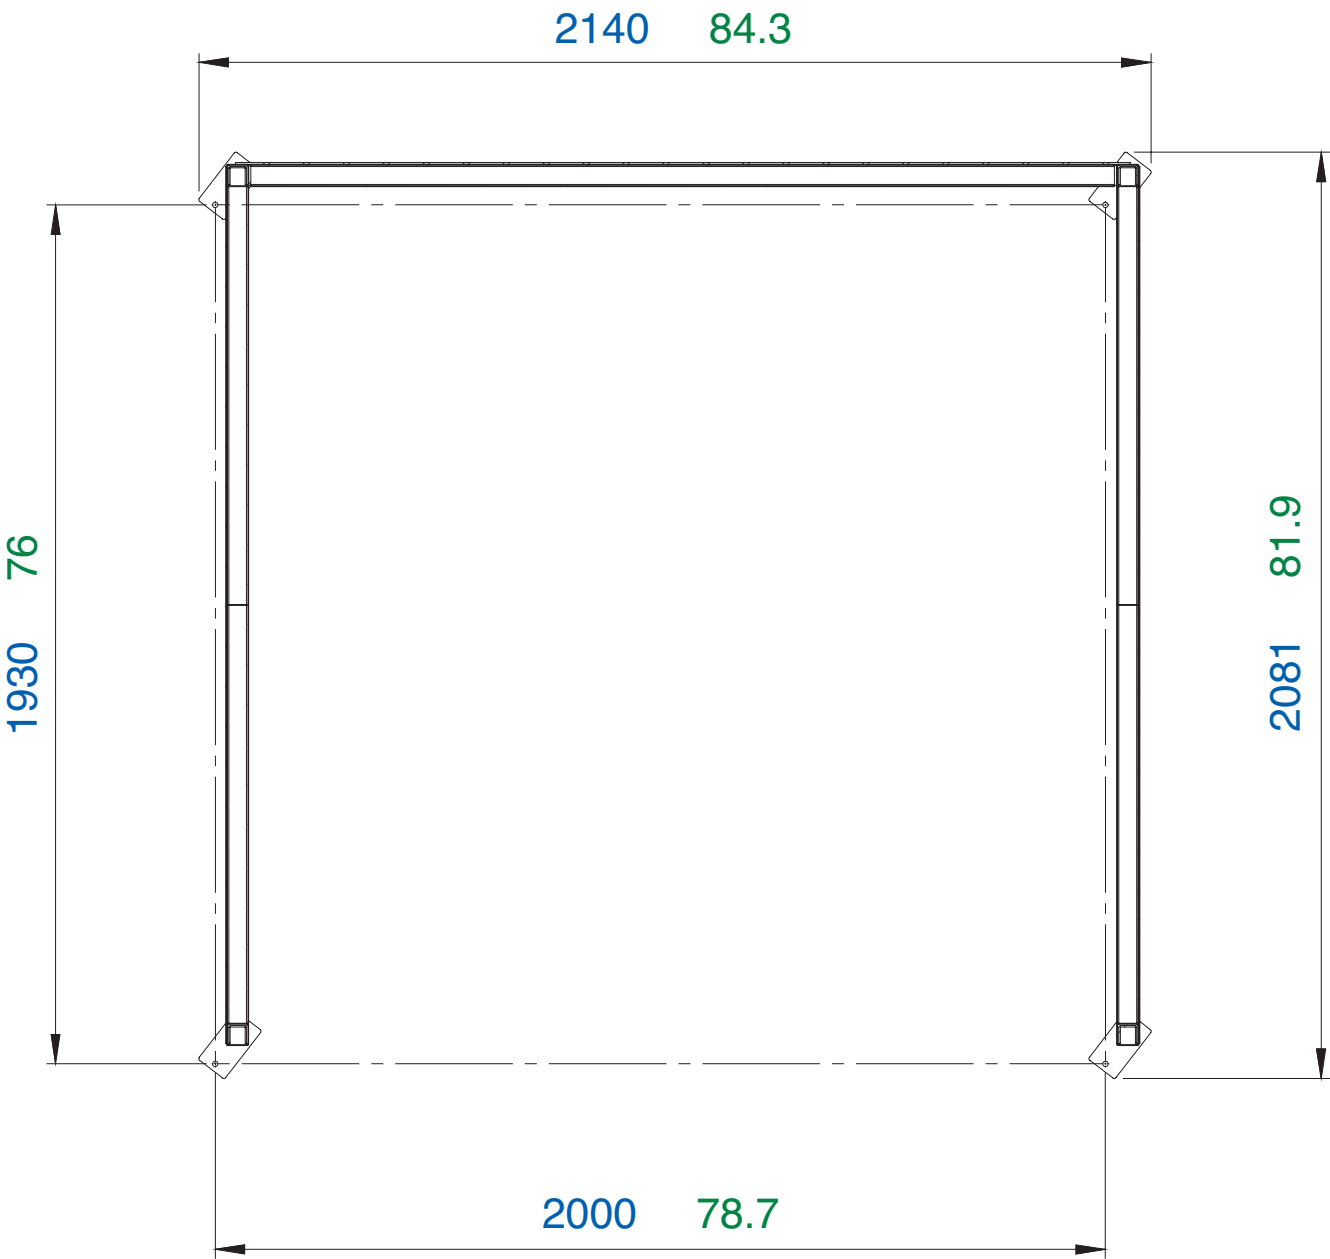

Stage 1 Assemble Side Frames

You will need

Item No	Part No	Description	Qty
5	KST	Straight Tie Assembly	2
6	KRF	Rear Frame Assembly	2
7	KFF	Front Frame Assembly	2
10	MB2	M10 x 20 Bolt	16
12	W1	M10 Washer	16




17mm Spanner

Align all holes and loosely fit the bolts before fully tightening

The joined 3 frame sections make the **Complete Side Frame (CSF)**

IMPORTANT
Ensure all holes are in correct position before assembling

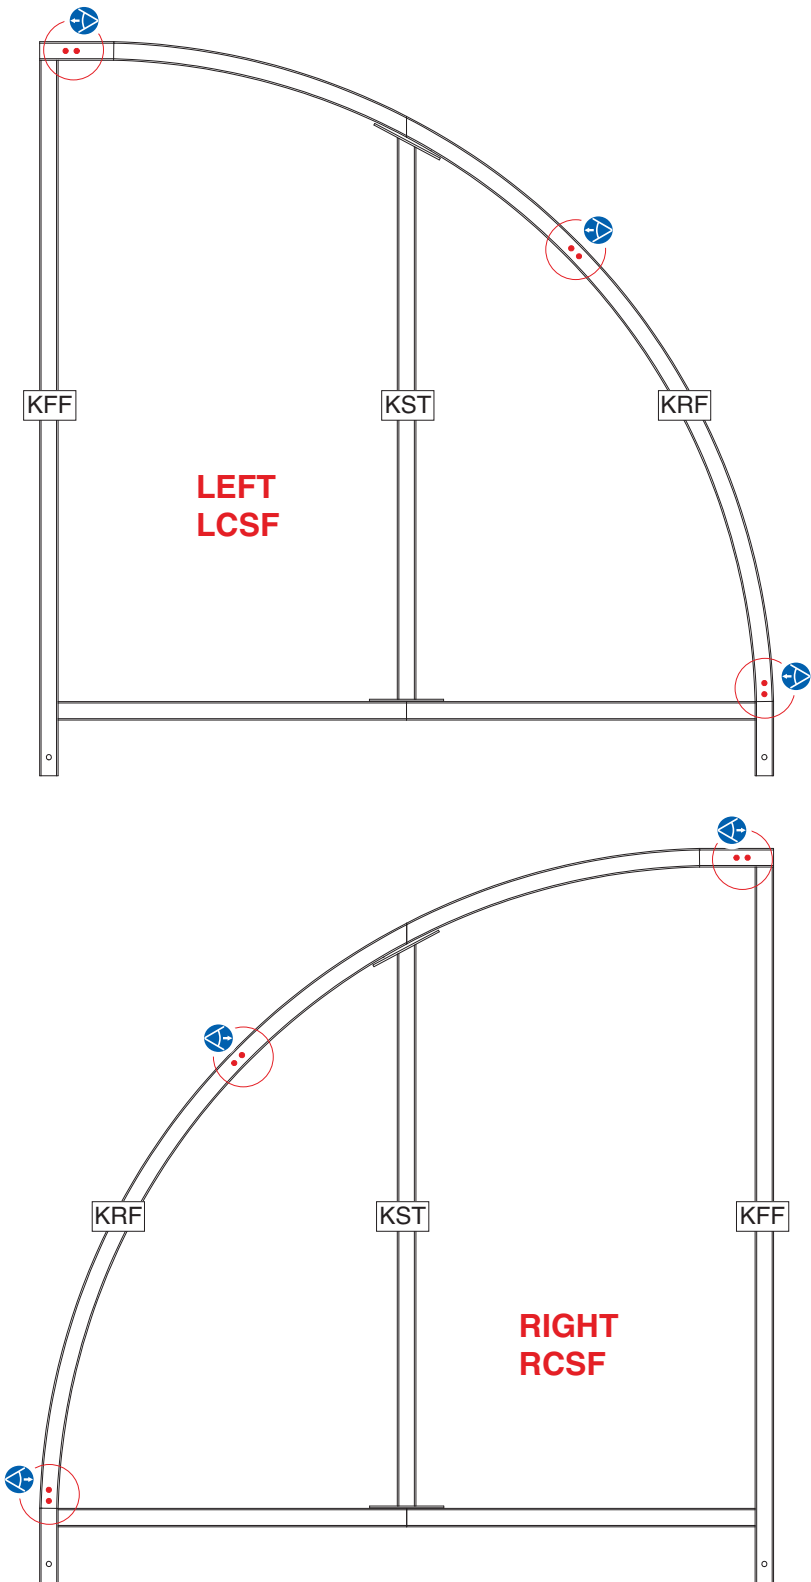


Stage 2 Attach Tie Bars to Left Frame

You will need

Item No	Part No	Description	Qty
	LCSF	Left Complete Side Frame	1
1	CTB	Central Tie Bar	3
10	MB2	M10 x 20 Bolt	6
12	W1	M10 Washer	6



Align all holes and loosely fit the screws before fully tightening

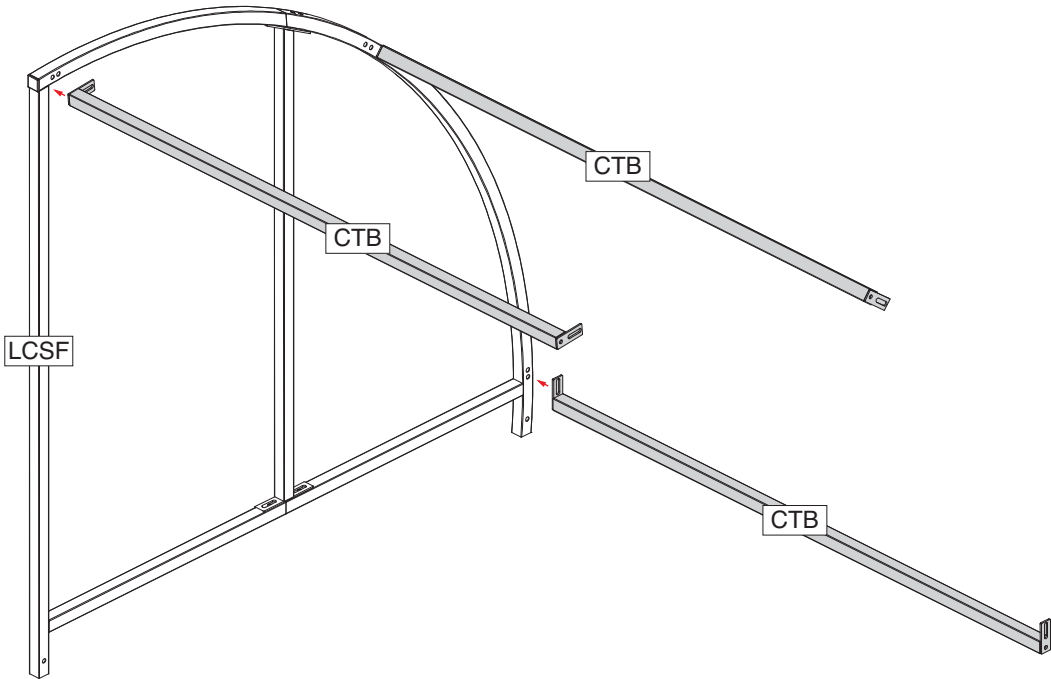

Stage 3 Attach Right Frame

You will need


Item No	Part No	Description	Qty
	RCSF	Right Complete Side Frame	1
10	MB2	M10 x 20 Bolt	6
12	W1	M10 Washer	6



17mm Spanner



Align all holes and loosely fit the screws before fully tightening

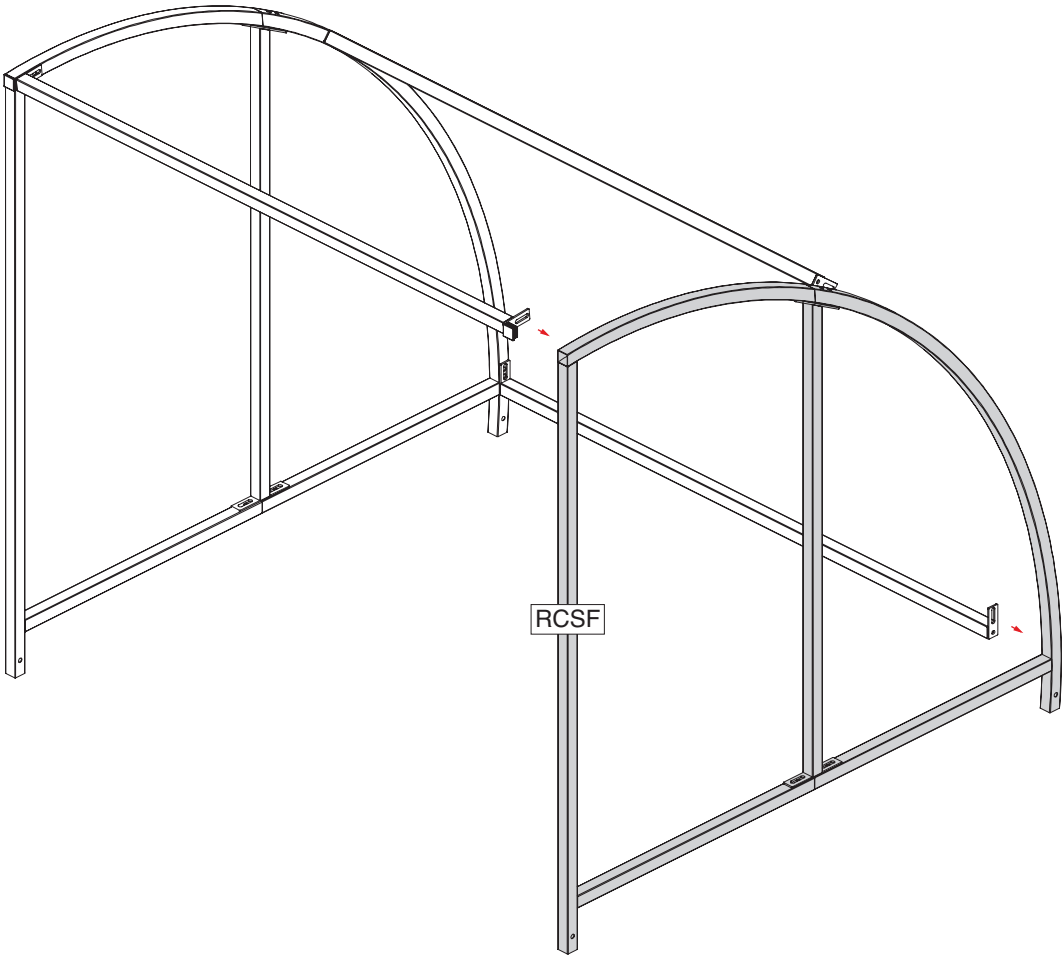


Stage 4 Affix Roof Panel & End Caps

You will need


Item No	Part No	Description	Qty
3	RP1	Roof Panel	1
8	EC50	End Cap	2
14	T25	Tek Screw	110

	Drill / Screwdriver
	Clamps

 Hold panel to frame using clamps before screwing into place

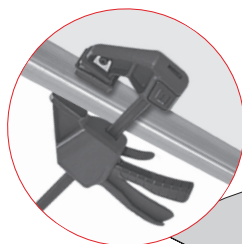

 Offer panel to the shelter as shown and secure in place using **T25** Tek Screws. Recommended 1 screw every 200mm / 8"

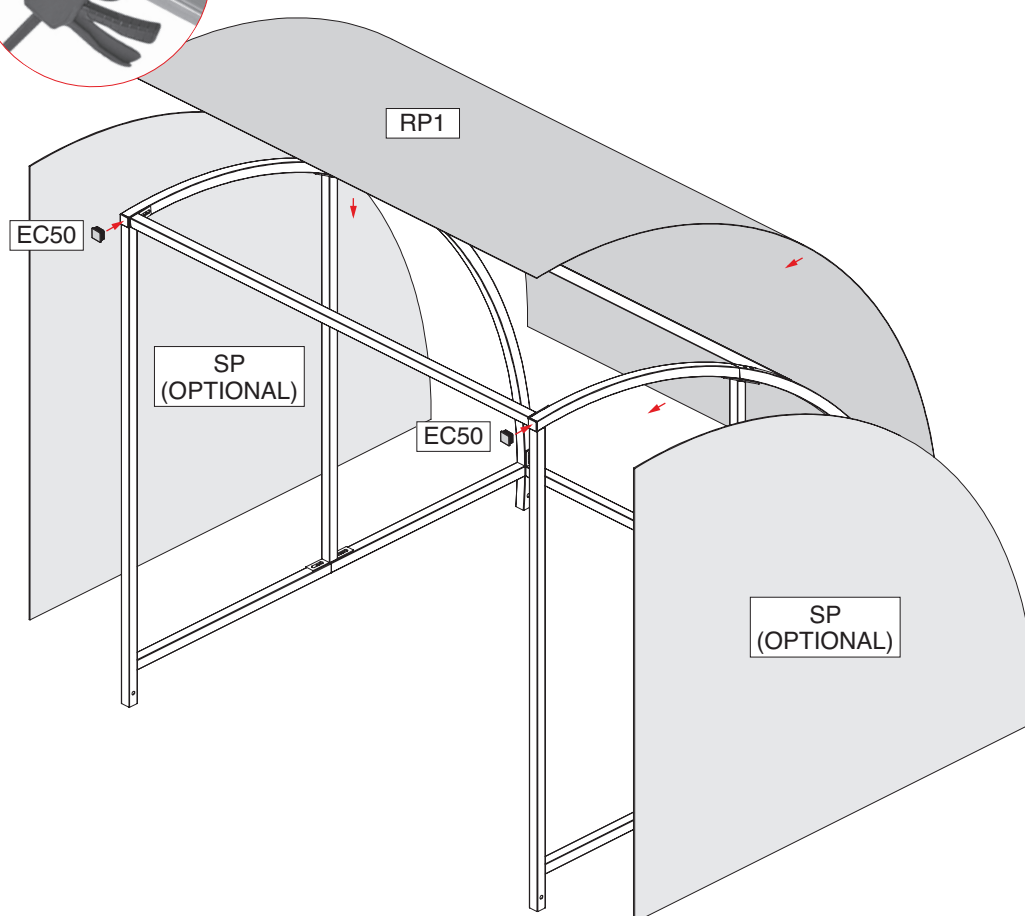

PLEASE NOTE  Always clean off swarf when fixing the roof panels to avoid rust stains


Stage 5 Affix Feet Brackets

You will need


Item No	Part No	Description	Qty
4	KIF	Internal Foot	4
9	MB1	M10 x 70 Bolt	4
11	N1	M10 Nut	4
12	W1	M10 Washer	4
13	W2	M12 Washer	4
15	BC	Black Caps	40
16	BTANCM10100	Concrete Bolt	4

	Drill / Screwdriver
	17mm Spanner

 Use at least 2 people to move shelter to desired location

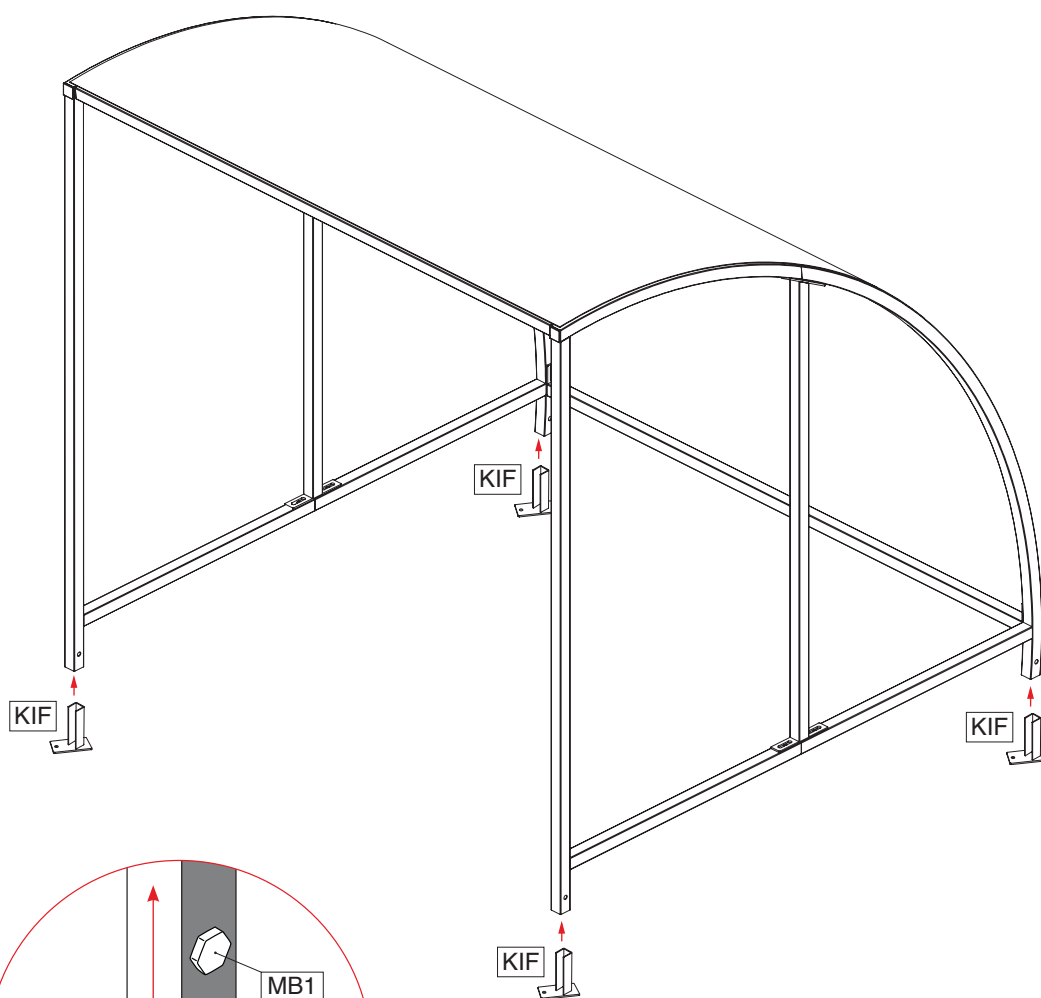

 Move shelter to desired position and place **KIF** Foot into each leg. Adjust the shelter until level then drill through the foot and secure with **MB1** Bolts.

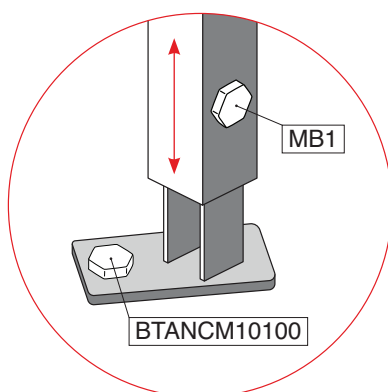

 Finally, fit **BC** Black Caps on all exposed nuts and bolts